




SAFETY, USE AND CARE INFORMATION FOR  
**FreezyFun Ultimate Frozen Drink  
& Soft-Serve Maker**

Save these instructions.

MODE D'EMPLOI ET DIRECTIVES RELATIVES À L'ENTRETIEN ET À LA SÉCURITÉ POUR  
**FreezyFun - Machine Ultime à Boissons  
Glacées et Crèmes Glacées Molles**

Conservez ces instructions.

Made in China  
Fabriqué en Chine

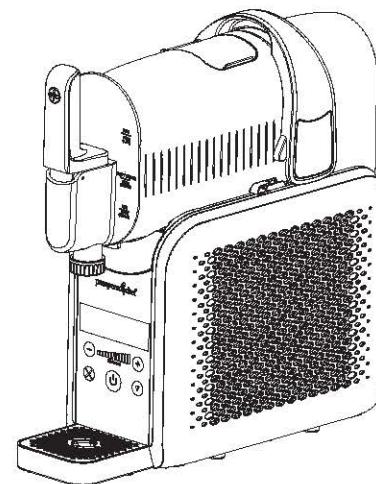

**101779**



# Table of Contents

## ENGLISH

Warning .....	4-5
Safeguards .....	5
Electric Hazards .....	6
Environmental Hazards .....	6
Parts .....	6-7
Cleaning .....	7-8
Use and Care .....	8-12
Important Before Use .....	8
Initial Test Run .....	9
Sugar Guidelines .....	12
Hard Alcohol & Spirit Guidelines .....	12
Troubleshooting .....	13-14
Guarantee .....	14

 Flammable material. (Indicated by a flame symbol with yellow background, surrounded by a blank triangle).

 Combustible material. May burst if heated. (Indicated by a flame symbol with white background, surrounded by a red diamond.)

 Indicates the presence of a hazard that can cause personal injury, death, or substantial property damage if the warning included with this symbol is ignored.

# Table des matières

## FRANÇAIS

Avertissement .....	15-16
Précautions .....	16
Danger Électrique .....	17
Dangers pour l'environnement .....	17
Pièces .....	17-18
Nettoyage .....	18-19
Mode d'emploi ed d'entretien .....	19-24
Important avant utilisation .....	20
Essai De Fonctionnement Initial .....	20
Directives sur le sucre .....	23
Directives sur les alcools forts et les spiritueux .....	24
Dépannage .....	24-25
Guarantie .....	25

 Matière inflammable. (Indiqué par un pictogramme de flamme sur fond jaune, entouré d'un triangle noir.)

 Matière combustible. Peut éclater si chauffée. (Indiqué par un pictogramme de flamme sur fond blanc, entouré d'un losange rouge.)




 Indique la présence d'un danger pouvant causer des blessures, la mort ou des dommages matériels importants si l'avertissement associé à ce symbole est ignoré.

## ⚠ SAFETY AND USE INSTRUCTIONS ⚠

When using electrical appliances, basic safety precautions should always be followed, including:


### ◆ WARNING ◆

1. Read all instructions.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children.
3. Children must be supervised to ensure that they DO NOT play with the appliance.
4. **◆DANGER:** There is a risk of fire or explosion due to flammable refrigerant. DO NOT puncture the refrigerant tubing. If you ever dispose of this product, do it in accordance with the applicable federal or local regulations pertaining to flammable refrigerant.
5. DO NOT operate unattended.
6. Avoid contact with moving parts. Keep your hands, hair, clothing, and utensils away from the moving parts to reduce risk of injury and/or damage to the appliance.
7. If the appliance, cord, or plug has been damaged in any manner, immediately discontinue use of the appliance. For any questions, call the Solution Center at (888) 687-2433 (United States) or (800) 342-2433 (Canada).
8. Unplug the appliance from outlet when not in use to prevent accidents (such as fire, electrical leakage, failure, etc.) and before cleaning, assembly, and disassembly.
9. DO NOT use the appliance for anything other than its intended use. This appliance is only intended for the preparation and serving of frozen beverages and soft serve. It's not intended for use with any nonfood materials or products.
10. DO NOT let the cord hang over the edge of a table or counter.
11. DO NOT let the cord or unit touch hot surfaces.
12. DO NOT place the appliance or the cord on or near heat sources, a hot gas or electric burner, or in a heated oven.
13. DO NOT use outdoors.
14. DO NOT microwave the accessories included with this appliance.
15. **⚠WARNING:** DO NOT use electrical appliances inside the compartments of the appliance, unless they are of the type recommended by the manufacturer.
16. DO NOT add hot ingredients to the appliance.
17. DO NOT submerge the appliance in water or other liquids.
18. DO NOT fill the container beyond the maximum fill lines. See p. 7 for more details.
19. Before operating, ensure all the utensils are removed from the containers. Failure to remove the utensils can cause the containers to shatter and potentially result in personal injury and property damage. Confirm only the Auger is in the Tank and properly installed before use. See the Assembly section for more details.

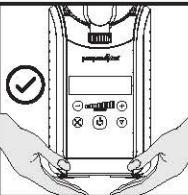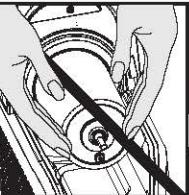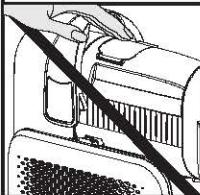


20. DO NOT carry the appliance by the Lock Lever or Cool Barrel as they may break. Instead, hold the appliance by grabbing both sides underneath the base.


21. DO NOT use with hard, loose ingredients or ice. This appliance is not intended to process loose frozen fruit, a block of solid ice, ice cubes, or any solids.
22. DO NOT operate the appliance on an unstable or wet surface. Always operate the appliance on a dry, stable, non-combustible, level surface.

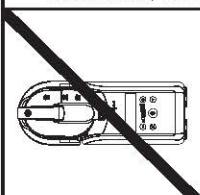

23. When handling the appliance, DO NOT turn it upside down or on its side. You must always keep it upright.

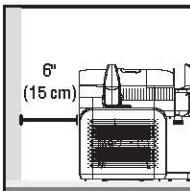

24. When in use, DO NOT place the appliance against a wall, cabinet, or against other appliances. Leave at least 6" (15 cm) of free space on the back and sides of the appliance. Do not store any item on top of the appliance.

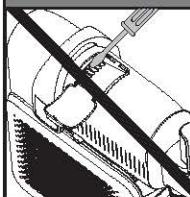

25. DO NOT put foreign objects into gaps and crevices of the appliance. DO NOT insert utensils or other foreign matter into gaps or crevices. This may cause electric shock or other dangerous accidents.


26. If the freezing solution appears to be leaking from the appliance, stop using the appliance immediately.
27. **WARNING:** Keep ventilation openings (see parts diagram below), in the appliance enclosure or in the built-in structure, clear of obstruction. Doing so may damage the appliance and/or cause it to overheat.
28. The use of accessory attachments not recommended by Pampered Chef may cause injuries.
29. Make sure the appliance is fully assembled before plugging in and pressing the Power Button. See the Assembly section for more details.
30. **WARNING:** DO NOT use any mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
31. DO NOT store explosive substances such as aerosol cans with a flammable propellant in or near the appliance.
32. DO NOT move the appliance while its operating. The appliance must be unplugged and emptied before moving.
33. DO NOT prefreeze the ingredients. All ingredients should be no lower than 34°F (1°C) as frozen ingredients may cause the Auger to stall.
34. **WARNING:** DO NOT damage the refrigerant circuit. This warning is only applicable for appliances with refrigerating circuits which are accessible by the user.
35. This appliance contains an insulation blowing gas. When disposing this appliance, it must be disposed in accordance with local regulations.
36. **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
37. **WARNING:** DO NOT locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

## **⚠ SAFEGUARDS ⚠**

1. This appliance is intended to be used in household and similar applications such as:
  - a. staff kitchen areas in shops, offices and other working environments;
  - b. farm houses and by clients in hotels, motels and other residential type environments;
  - c. bed and breakfast type environments;
  - d. catering and similar non-retail applications.
2. Clean frequently. Refer to the Cleaning section for proper maintenance.
3. Be sure the outlet is designated for just this appliance and has nothing else plugged into it.
4. Never connect this unit to an external timer switch, smart plug, or separate remote-control system.
5. DO NOT store the unit in direct sunlight.
6. DO NOT operate the appliance adjacent to or inside sinks and other sources of water.
7. Position the appliance away from any overhangs, walls, and table or countertop edges.
8. DO NOT insert or remove the plug with wet hands. To avoid injuries due to electric shock, make sure your hands are dry before plugging and unplugging the unit.
9. DO NOT interact with the appliance with wet hands.
10. DO NOT use an adapter, extension cord, or inverter with this appliance.
11. **WARNING:** Use and clean with safe drinking water only.
12. Using any high-acidic foods or foods with dyes/food colorings may cause staining. This is considered normal and doesn't affect the appliance's performance.

## ELECTRICAL HAZARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

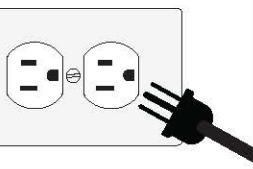


1. To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug doesn't fit fully into the outlet, contact a qualified electrician.
2. Use only with a 120V 60Hz power outlet with a minimum current rating of 15A. Failure to follow can result in electrical shock, fire, or other serious injury.
3. To protect against electrical shock, do not immerse the cord, plug, or any part of the unit in water or other liquids. DO NOT pour water on its side or control panel.
4. A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a long cord.
5. To disconnect, turn the power off by pressing and holding the Power Button. Then, remove the plug from the wall outlet. Always pull the plug out from the wall; never pull the cord.
6. This appliance has important markings on the plug. The entire supply cord isn't suitable for replacement. If damaged, call the Solution Center at (888) 687-2433 (United States) or (800) 342-2433 (Canada).
7. If the plug fits loosely into the outlet, or if the outlet or plug feels warm, DO NOT use that outlet.

## ENVIRONMENTAL HAZARDS


1. This appliance uses flammable refrigerants. When disposing of this appliance the end of its life, it MUST be recycled separately from other domestic waste.
2. It should be disposed of at a selective collection center for electrical and/or electronic appliances. As the user, you're responsible for taking the appliance to the appropriate collection center.
3. For more detailed information about available collection systems, contact your local waste collection organization.

## PARTS

A. Filling Chute	E. Condensation Tray	I. Drip Tray Cover and Drip Tray	L. Control Panel
B. Tank	F. Auger	J. Lock Lever	M. Soft-Serve Tip
C. Dispensing Handle	G. Cool Barrel	K. Vents	
D. Dispensing Spout	H. Well		

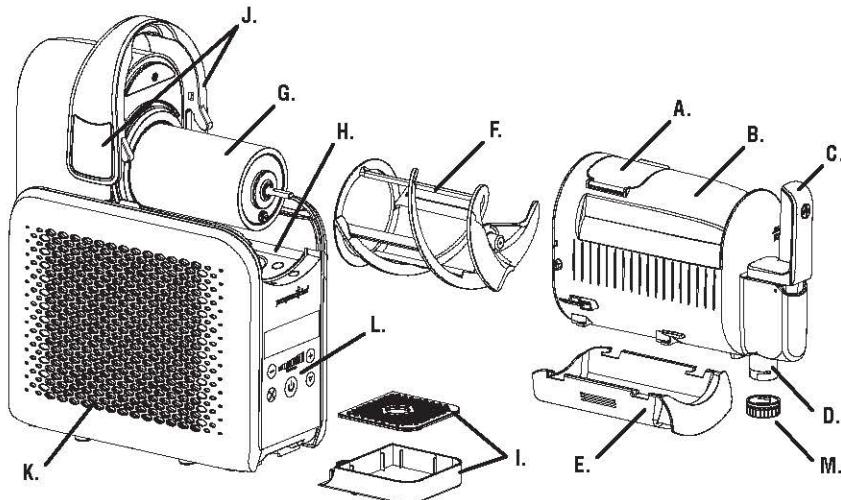

## DISPLAY

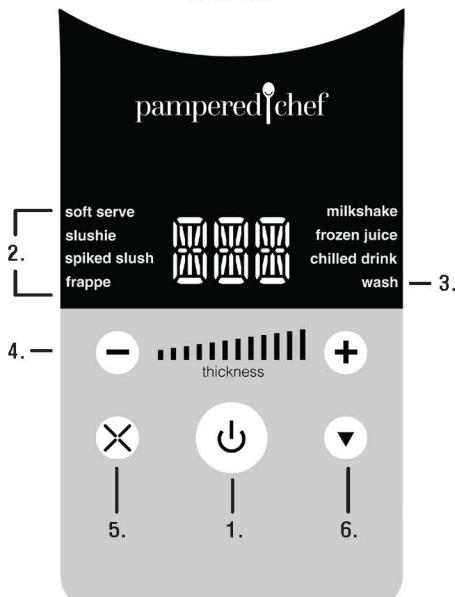

## CONTROL PANEL DISPLAY & OPERATING BUTTONS


- Power Button:** Press to turn the appliance on. Press and hold to turn the appliance off.
- Presets:** Choose from a selection of presets to achieve the perfect temperature and thickness for your frozen creations.
- Wash Preset:** This rinses the appliance without cooling. For a deeper clean, add a small amount of dish soap directly to the water.
- Thickness Setting:** Easily adjust the thickness for your perfect frozen concoction. Press the minus button to decrease the thickness of your frozen drink or press the plus button to increase the thickness of your frozen drink.
- Cancel Button:** Press any time to cancel functions. The screen will default to the Wash preset.
- Arrow Button:** Press to cycle through the different presets.

## PRESETS

Preset	Default Thickness	Ideal Capacity (The thickness level is indicated by the number of bars.)	Products to Avoid Using Note: The following ingredients won't generate your desired consistency.
Soft Serve	12 bars	30 fl. oz. (875 mL)	Water
Slushie	6 bars	16–64 fl. oz. (500 mL–1.9 L)	Diet sodas, seltzers, and water
Spiked Slush	8 bars	16–64 fl. oz. (500 mL–1.9 L)	Pure alcohol, low-sugar or sugar-free cocktails, and water
Frappe	4 bars	16–64 fl. oz. (500 mL–1.9 L)	Black coffee, unsweetened coffee, and water
Milkshake	4 bars	16–64 fl. oz. (500 mL–1.9 L)	Yogurt drinks, protein drinks, and water
Frozen Juice	6 bars	16–64 fl. oz. (500 mL–1.9 L)	Sugar-free drinks and water
Chilled Drink	1 bar	16–64 fl. oz. (500 mL–1.9 L)	
Wash	—	64 fl. oz. (1.9 L)	Abrasive cleaners

## CLEANING

- Clean the appliance thoroughly before and after using it.
- If you're not using the Wash cycle, you should dispense all the contents. Then, turn the appliance off, unplug it, and disassemble it before cleaning. If you're using the Wash cycle, refer to the Using the Wash Preset section.
- The Tank, Auger, Condensation Tray, Soft-Serve Tip, Drip Tray, and Drip Tray Cover are dishwasher-safe.

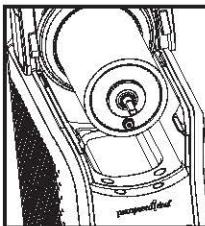

4. Wipe the Cool Barrel and the Well underneath it with a damp cloth. **Note:** You may need to use a paper towel to soak up any remaining liquid in the Well.

5. Dry the appliance thoroughly before using or storing it.  
6. DO NOT use abrasive cleaners like steel wool, scouring powders, or other abrasive materials.



#### Using the Wash Preset:

This cycle washes the appliance. After using this cycle, you can wash all parts by hand or in the dishwasher to fully clean all parts after every use. For best results, use the wash cycle before disassembling and cleaning all parts.

1. Dispense all the remaining frozen drink or soft serve into a container.
2. Press the Cancel Button to stop the current preset. The appliance will then default to the Wash preset.
3. Add water until it reaches the max fill line (64 oz./1.9 L).
4. Press the Power Button to start the Wash preset.
5. Allow the water to cycle through until the Tank looks thoroughly rinsed.
6. Place a large bowl under the Dispensing Spout. Slowly dispense the water from the appliance into the bowl.  
**Note:** Water will come out quickly, so hold the bowl up to the spout or use the Soft-Serve Tip to slow the flow rate of the water.
7. Repeat the process if the Tank doesn't look thoroughly rinsed.
8. Press and hold the Power Button to turn the appliance off.

#### Storing:

1. Allow all parts to dry thoroughly before reassembling and/or storing the unit.
2. DO NOT wrap the cord around the bottom of the base. Instead, store the unit upright and with all parts fully assembled. Then, bundle the cord and secure it with the included hook and loop fastener.

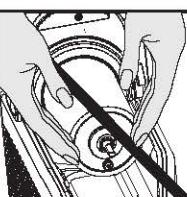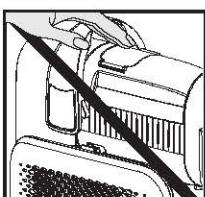

3. When moving the appliance, lift the appliance by grabbing both sides underneath the base. DO NOT lift or carry the appliance by the Lock Lever or Cool Barrel as they may break.

4. DO NOT store ingredients inside the Tank.

## USE AND CARE

### ⚠️ IMPORTANT BEFORE USE ⚠️

#### Before first use:

- Remove all packaging. Make sure all parts are present and accounted for.
- Read all instructions in this document.
- Clean all parts. See the Cleaning section for instructions.
- Place the unit on a counter for at least 2 hours before operating. This allows the refrigerant to settle for safe use and optimal results.
- For any questions, call the Solution Center at (888) 687-2433 (United States) or (800) 342-2433 (Canada).


## INITIAL TEST RUN


1. Assemble the appliance by following the Assembly and Use sections below.
2. Insert the plug into a power outlet.
3. Press the Power Button to turn the appliance on.
4. Use the Arrow Button to scroll until the Wash preset flashes.
5. Use the Filling Chute to add 64 oz. (1.9 L) of water to the Tank.
6. Press the Power Button to start the Wash preset.
7. After 2 minutes, press the Cancel Button to stop the Wash preset.
8. Place a large bowl under the Dispensing Nozzle and use the Dispensing Handle to dispense the water.

Note:

- You'll need a minimum of 16 oz. (500 mL) of liquid to use the appliance except for the Soft Serve preset.
- You can add up to 64 oz. (1.9 L) of liquid for any preset except the Soft Serve preset. **Note:** Refer to Pampered Chef recommended recipes for this setting.
- The ideal liquid capacity when using the Soft Serve preset is 30 oz. (875 mL).
- DO NOT add ice or solid ingredients like fruit, ice cream, or frozen fruit to the appliance.
- DO NOT add hot ingredients to the appliance.
- **WARNING:** Review all warnings at the beginning of this use and care before proceeding. Failure to follow safety information may result in serious injury or property damage.


**How to Assemble and Use:**

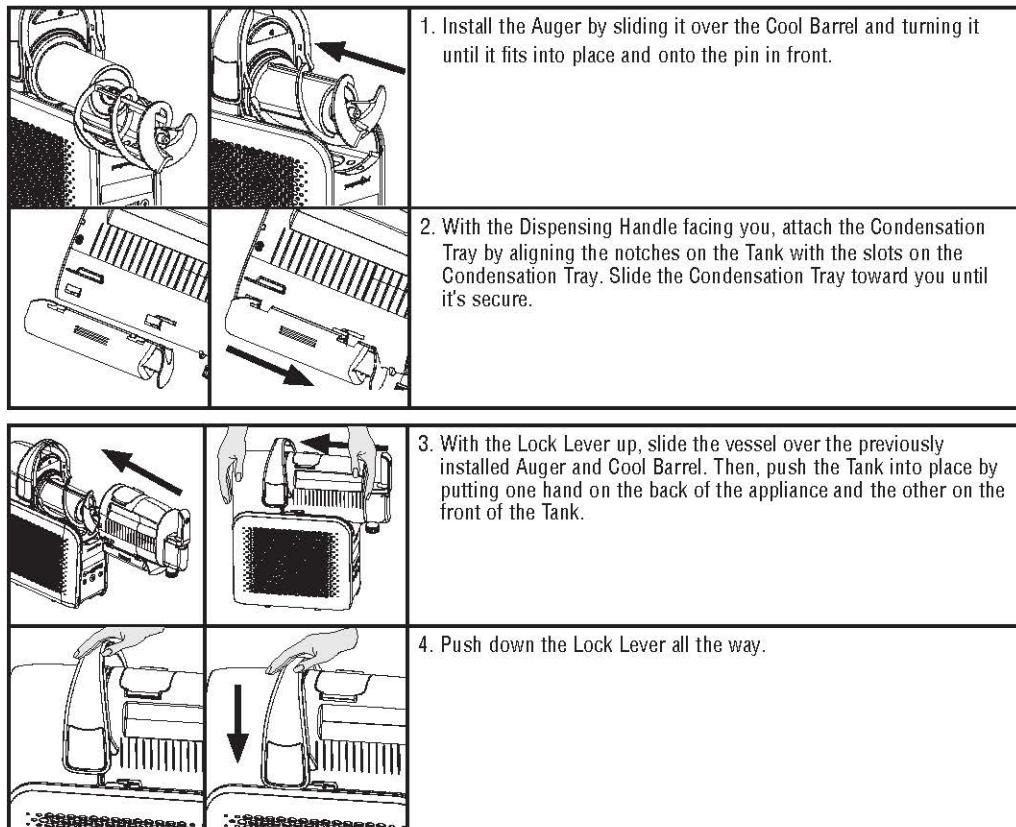

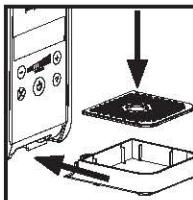


5. Place the Drip Tray Cover on top of the Drip Tray and insert the Drip Tray into the front of the appliance until it clicks into place.

6. Plug the appliance in.

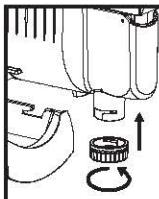


7. If you're making soft serve, add the Soft-Serve Tip by aligning the notches of the Soft-Serve Tip with the slots on the Dispensing Spout. Then, push up and turn it counterclockwise until it's in place.


8. Turn the appliance on by pressing the Power Button. Then, scroll to your desired preset with the Arrow Button. Press the Power Button again to start your chosen preset.

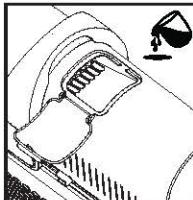


9. Once the Auger starts moving, pour your liquid into the Tank with the Filling Chute. Close the chute when you're done.

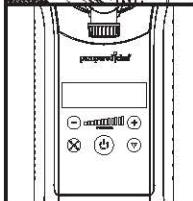

10. When your frozen drink or soft-serve mixture is done, the unit will beep and the display will read, "End."

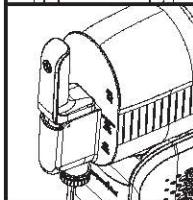

11. Place a container under the Dispensing Spout and pull the Dispensing Handle to dispense.

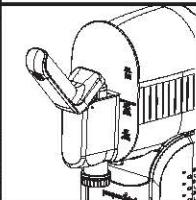


**Note:**

- The appliance will continue to run after a cycle finishes to keep your frozen drink at the ideal temperature, so it's always ready to dispense. To prevent your mixture from overfilling, dispense frequently.
- It can take 15–60 minutes to make your frozen drink or soft serve depending on the preset, ingredients, liquids, and temperature. Smaller servings will slush faster than larger servings.
- The appliance will continue to run for up to 12 hours except when you're using the Wash preset. After it's been running for 12 hours, it will beep and automatically shut off.

**How to Disassemble:**

1. Before disassembling, use the Dispensing Spout to empty all the remaining contents from the Tank into another container.
2. Turn the appliance off by pressing and holding the Power Button. Then, remove the plug from the power outlet.

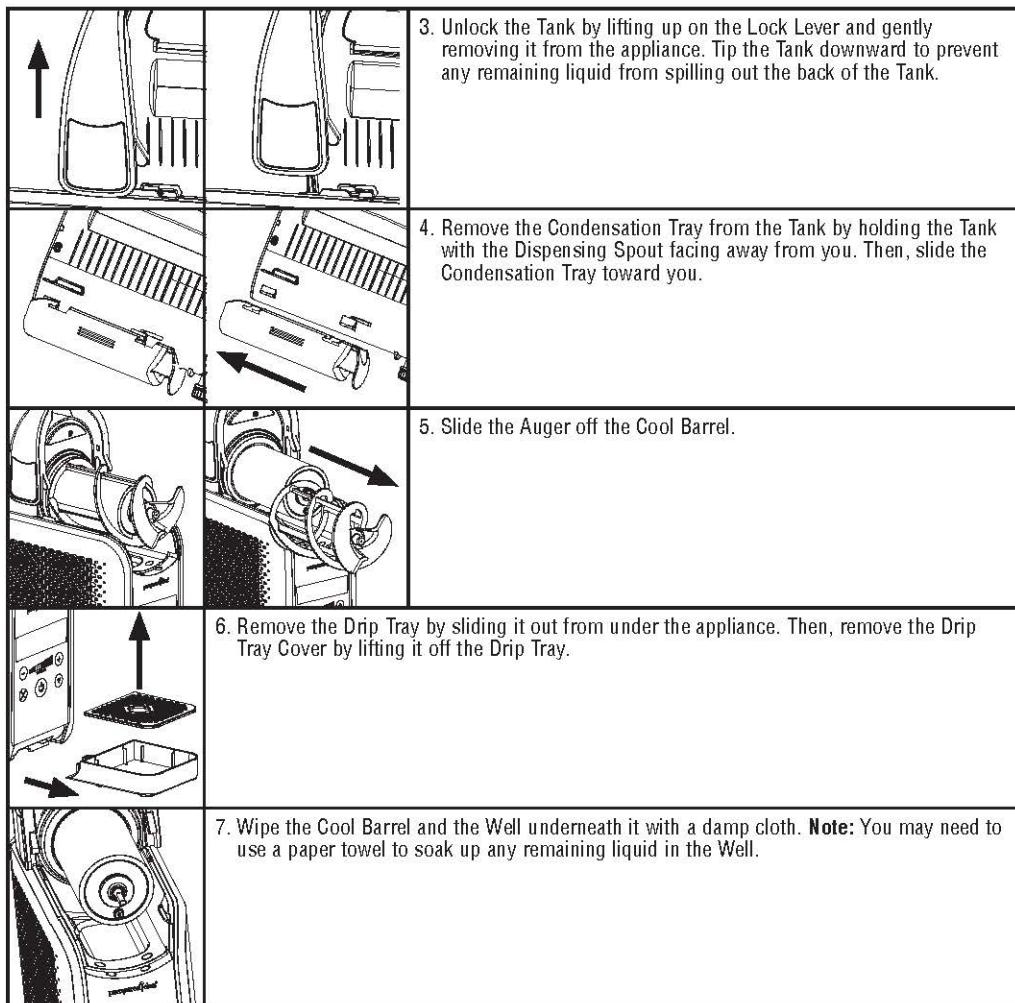

8. See the Cleaning section for more info.

#### Helpful Tips:

- Premixed ingredients will taste sweeter. However, once the mixture reaches the desired thickness and temperature, it'll taste less sweet.
- Recipes must include at least 4% sugar without artificial sweeteners. DO NOT use diet sodas. They won't achieve the desired consistency.
- When using the Spiked Slush preset, all premade liquids must contain 2.8–16% alcohol.
- For best results, chill the liquid(s) or blended ingredients before adding it to the appliance.
- For the frostiest results, chill serving glasses before dispensing your frozen drinks in them.
- Use the minus and plus buttons to adjust the thickness of your frozen drink to your preference.
- When using the Milkshake or Frappe preset, dispense contents within 30 minutes of the preset ending to avoid a foamy output.
- For the best dispensing experience, fill the Tank to the recommended fill line for the preset you're using.
- For best results, enjoy your frozen drink immediately after the cycle ends.
- Use whole milk for the best soft-serve results.

### Resetting the Motor:

1. This appliance features a unique safety system that prevents damage to the appliance should it inadvertently become overloaded. If the appliance is overloaded, the motor will become temporarily disabled. Follow this reset procedure:
  - a. Unplug the appliance from the electrical outlet.
  - b. Allow the appliance to cool for approximately 15 minutes.
  - c. Dispense all contents.
  - d. Remove all parts and accessories.
  - e. Ensure no ingredients are jamming the Auger.
2. **IMPORTANT:** Ensure the maximum capacity is not exceeded. This is the most typical way for an overload to occur.
  - a. DO NOT use the appliance to process a solid block of ice or ice cubes.
  - b. DO NOT use the appliance to make a smoothie or process hard, loose ingredients.

### SUGAR GUIDELINES

When using this appliance, refer to the drink/liquid nutrition label to ensure the sugar content meets the recommended guidelines below.


Serving Size	Minimum Total Sugar Amount
8 fl. oz. (250 mL)	8g
12 fl. oz. (375 mL)	11 g
20 fl. oz. (600 mL)	18 g

Follow this rule: For every 8 ounces of liquid, you'll need roughly 8 grams of sugar.

Note:

- Prefrozen ingredients will taste sweeter. However, once the mixture reaches the desired thickness and temperature, it'll taste less sweet.
- Not enough sugar or too much alcohol will prevent your drink from freezing or slushing. For that reason, all mixes must contain at least 4% sugar to achieve the desired results.

#### EXAMPLE: Apple juice

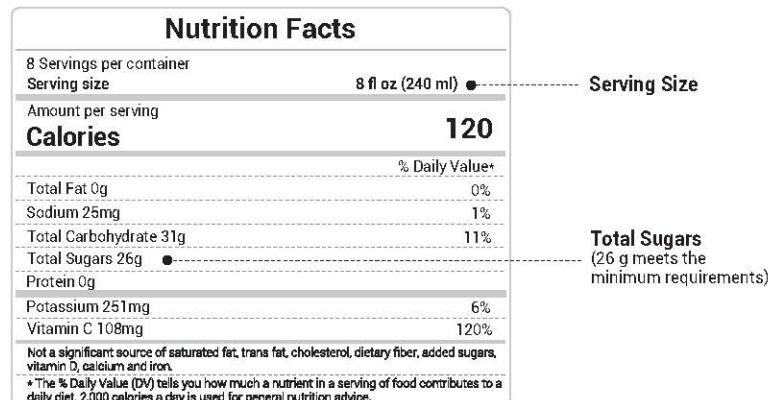

- Sugar-free substitutes and artificial sweeteners won't aid in meeting the total necessary sugar requirements.

### HARD ALCOHOL & SPIRIT GUIDELINES

When making frozen cocktails, refer to this chart for the maximum hard alcohol/spirit content for total recipe size.

Serving Size	Maximum Alcohol Amount
2 cups (16 fl. oz./500 mL)	1/2 cup (2.5 fl. oz./75 mL)
4 cups (32 fl. oz./1 L)	2/3 cup (5 fl. oz./175 mL)
8 cups (64 fl. oz./1.9 L)	1 1/3 cups (10 fl. oz./400 mL)

The chart above is a guide for incorporating hard alcohol or spirits (35%+) only. When using the Spiked Slush preset, all premade inputs (wine, beer, seltzer, etc.) must have 2.8–16% alcohol.

## TROUBLESHOOTING

**WARNING:** To reduce the risk of shock and unintended operation, turn the power off and unplug the appliance before troubleshooting.

Problem	Possible Reason	Solution
You get an E1 error code.	The Tank isn't installed properly.	<ol style="list-style-type: none"><li>1. With the Locking Lever up, slide the Tank over the installed Auger and Cool Barrel.</li><li>2. Push down the Lock Lever all the way.</li><li>3. Press the Power Button to until you hear a beep and the preset illuminates. This indicates the appliance is ready to use.</li></ol>
You get an E2 error code.	There's a temperature-sensing issue or short-circuit fault.	Contact the Solution Center at (888) 687-2433 (United States) or (800) 342-2433 (Canada) for assistance.
You get an E3 error code.	The appliance is overheated.	See the Resetting the Motor section.
You get an E4 error code.	It's a low-sugar alert or motor-stop alert.	<ol style="list-style-type: none"><li>1. Turn the appliance off.</li><li>2. Check the sugar content of your recipe to confirm it contains at least 4% sugar.</li><li>3. If you're using a premade beverage, check the ingredient list to ensure the sugar content is at least 4% and ensure the beverage doesn't include artificial sweeteners. Refer to the Required Sugar Content section for more details.</li><li>4. If the recipe doesn't meet the minimum sugar requirements, add 1–2 tablespoons (15–30 mL) of flavored syrup, juice, sugar, date sugar, coconut sugar, maple syrup, agave, simple syrup, or honey per serving and decrease the thickness to level 1.</li><li>5. Restart the appliance by pressing the Power Button. Then, select your preset and press the Power Button again to resume mixing your frozen drinks.</li></ol> <p>If the unit is overloaded, the motor will temporarily stall. If that happens, do this:</p> <ol style="list-style-type: none"><li>1. Unplug the appliance from the electrical outlet.</li><li>2. Allow the appliance to cool for approximately 15 minutes.</li><li>3. Remove the contents from the vessel.</li></ol>

You get an E4 error code. (continued)	It's a low-sugar alert or motor-stop alert.	<ol style="list-style-type: none"> <li>4. Remove all parts and accessories while confirming no ingredients are jamming the Auger.</li> <li>5. Plug the appliance in again and reassemble all parts. Then, turn on the appliance and resume your chosen preset.</li> </ol> <p>DO NOT add frozen ingredients or ice to this appliance.</p>
You get an E5 error code.	It's a high-sugar alert or high-alcohol alert.	<ol style="list-style-type: none"> <li>1. Check the alcohol content in your recipe to ensure it contains 2.8–16% alcohol.</li> <li>2. If you're using hard alcohol or spirits (35% +), use 4 oz. (125 g) of alcohol for every 24 oz. (680 g) of the total recipe size. Refer to the Sugar, Hard Alcohol &amp; Spirit Guidelines for more details.</li> <li>3. If a drink exceeds the maximum alcohol amount, add ¼ cup (60 mL) of water, soda, tonic water, seltzer, coffee or tea per serving to dilute the liquid input.</li> <li>4. Restart the appliance by pressing the Power Button. Then, start your chosen preset again to continue creating your frozen drink.</li> </ol>
You get an E6 Error Code	There's a control printed circuit board or power board problem.	Contact the Solution Center at (888) 687-2433 (United States) or (800) 342-2433 (Canada) for assistance.
The slushie will not dispense when I pull on the Dispensing Spout.	The nozzle is blocked.	<p>Press the cancel button and let the mix soften for about 5 minutes (or more) and then try dispensing again.</p> <p>You can restart the cycle after if you want to keep your drink frozen for several more hours.</p>

## GUARANTEE

- Two-year guarantee for noncommercial use. Refer to our website or the sales receipt for details.

For information about our products, visit our website.

© 2026 Pampered Chef used under license. Pampered Chef, Pampered Chef and Spoon design, Spoon design, and Spoon design are trademarks used under license.




04/26

## **⚠ DIRECTIVES DE SÉCURITÉ ET D'UTILISATION ⚠**

**Lors de l'utilisation d'appareils électriques, il convient de toujours respecter les mesures de sécurité de base, notamment les suivantes :**

### **◆ AVERTISSEMENT ◆**


1. Lire toutes les instructions.
2. Cet appareil n'est pas destiné à être utilisé par des personnes (y compris des enfants) ayant des capacités physiques, sensorielles ou mentales réduites, ou un manque d'expérience et de connaissances, à moins qu'elles ne soient étroitement surveillées et informées de l'utilisation de l'appareil par une personne responsable de leur sécurité. Une surveillance étroite est nécessaire lorsque tout appareil électrique est utilisé par ou à proximité des enfants. Les enfants doivent être surveillés afin d'assurer qu'ils ne JOUENT PAS avec l'appareil.
3. Les enfants doivent être surveillés afin d'assurer qu'ils NE JOUENT PAS avec l'appareil.
4. **◆DANGER :** Il existe un risque d'incendie ou d'explosion en raison d'un réfrigérant inflammable. NE percez PAS le tuyau du réfrigérant. Si vous devez mettre ce produit au rebut, faites-le conformément aux réglementations fédérales ou locales applicables relatives aux réfrigérants inflammables.
5. N'UTILISEZ PAS sans surveillance.
6. Évitez tout contact avec les pièces en mouvement. Tenez vos mains, cheveux, vêtements et ustensiles loin des pièces en mouvement afin de réduire les risques de blessures ou de bris d'appareil.
7. Si l'appareil, le cordon ou la fiche est endommagé de quelle que façon que ce soit, cesser immédiatement l'utilisation de l'appareil. Pour toute question,appelez le Centre de solutions au 888 687-2433 (États-Unis) ou au 800 342-2433 (Canada).
8. Débranchez l'appareil de la prise murale lorsqu'il n'est pas utilisé afin d'éviter tout accident (incendie, fuite électrique, panne, etc.) et avant de le nettoyer, de le monter ou de le démonter.
9. N'UTILISEZ cet appareil que pour l'usage auquel il est destiné. Cet appareil est destiné uniquement à la préparation et au service de boissons glacées et de crème glacée molle. Il n'est pas conçu pour être utilisé avec des matériaux ou produits non alimentaires.
10. NE LAISSEZ PAS le cordon pendre au bord d'une table ou d'un comptoir.
11. NE LAISSEZ PAS le cordon ou l'appareil entrer en contact avec des surfaces chaudes.
12. NE PLACEZ PAS l'appareil ou le cordon sur ou à proximité d'une source de chaleur, d'une cuisinière à gaz ou électrique chaude, ou dans un four chaud.
13. N'UTILISEZ PAS cet appareil à l'extérieur.
14. NE METTEZ PAS au micro-ondes les accessoires inclus avec cet appareil.
15. **◆AVERTISSEMENT :** N'utilisez PAS d'appareils électriques à l'intérieur des compartiments de l'appareil, sauf s'ils sont du type recommandé par le fabricant.
16. N'AJOUTEZ PAS d'ingrédients chauds à l'appareil.
17. N'IMMERGEZ PAS l'appareil dans l'eau ou d'autres liquides.
18. NE REMPLISSEZ PAS le contenant au-delà des lignes de remplissage maximales. Voir la page 19 pour plus de détails.
19. Avant de l'utiliser, assurez-vous que tous les ustensiles sont retirés des contenants. Si vous ne retirez pas les ustensiles, les récipients risquent de se briser et de causer des blessures et des dommages matériels. Avant utilisation, vérifiez que seule la vis se trouve dans le réservoir et qu'elle est correctement installée. Voir la section Assemblage pour plus de détails.

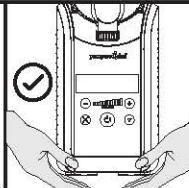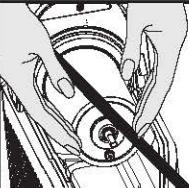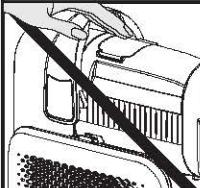

20. NE TRANSPORTEZ PAS l'appareil en le tenant par le levier de verrouillage ou le cylindre de refroidissement, car ceux-ci pourraient se casser. Tenez plutôt l'appareil en saisissant les deux côtés sous la base.

21. N'UTILISEZ PAS avec des ingrédients durs, en vrac ou de la glace. Cet appareil n'est pas conçu pour traiter des fruits congelés en vrac, des blocs de glace solide, des glaçons ou tout autre solide.

22. N'UTILISEZ PAS l'appareil sur une surface instable ou mouillée. Faites toujours fonctionner l'appareil sur une surface sèche, stable, incombustible et plane.

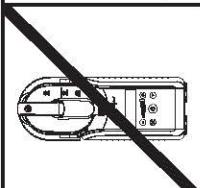

23. Lorsque vous manipulez l'appareil, NE le retournez PAS à l'envers ou sur le côté. Vous devez toujours le garder à la verticale.