


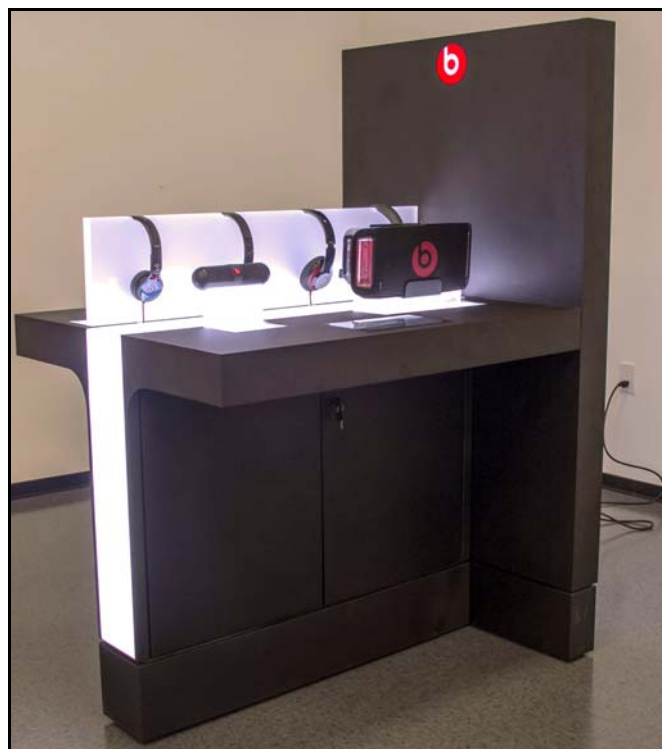

Social Table (031-524-xxx)

Installation Guide



Need further assistance?






For troubleshooting, parts, or service, please contact Lynx Innovation.

E-mail: support@lynxinnovation.com

Normal response time is 24 hours.

What's Included

Make sure the following items are included in the shipment. If any items are missing, please contact technical support at support@lynxinnovation.com.

 <p>Thumbscrews (2)</p>	 <p>T20 security screwdriver</p>	 <p>T20 security screw</p>
 <p>Light box</p>	 <p>Main base unit</p>	

Estimated time of completion:

45 minutes


Scope of work:

- Install the social table
- Perform the functionality test


Installation

To install the social table, perform the following steps:

1. Attach the main base unit to the lightbox by inserting the tongue of the light box into the slot on the lower portion of the main base unit. The graphic on the lightbox is facing out and away from the main base unit.

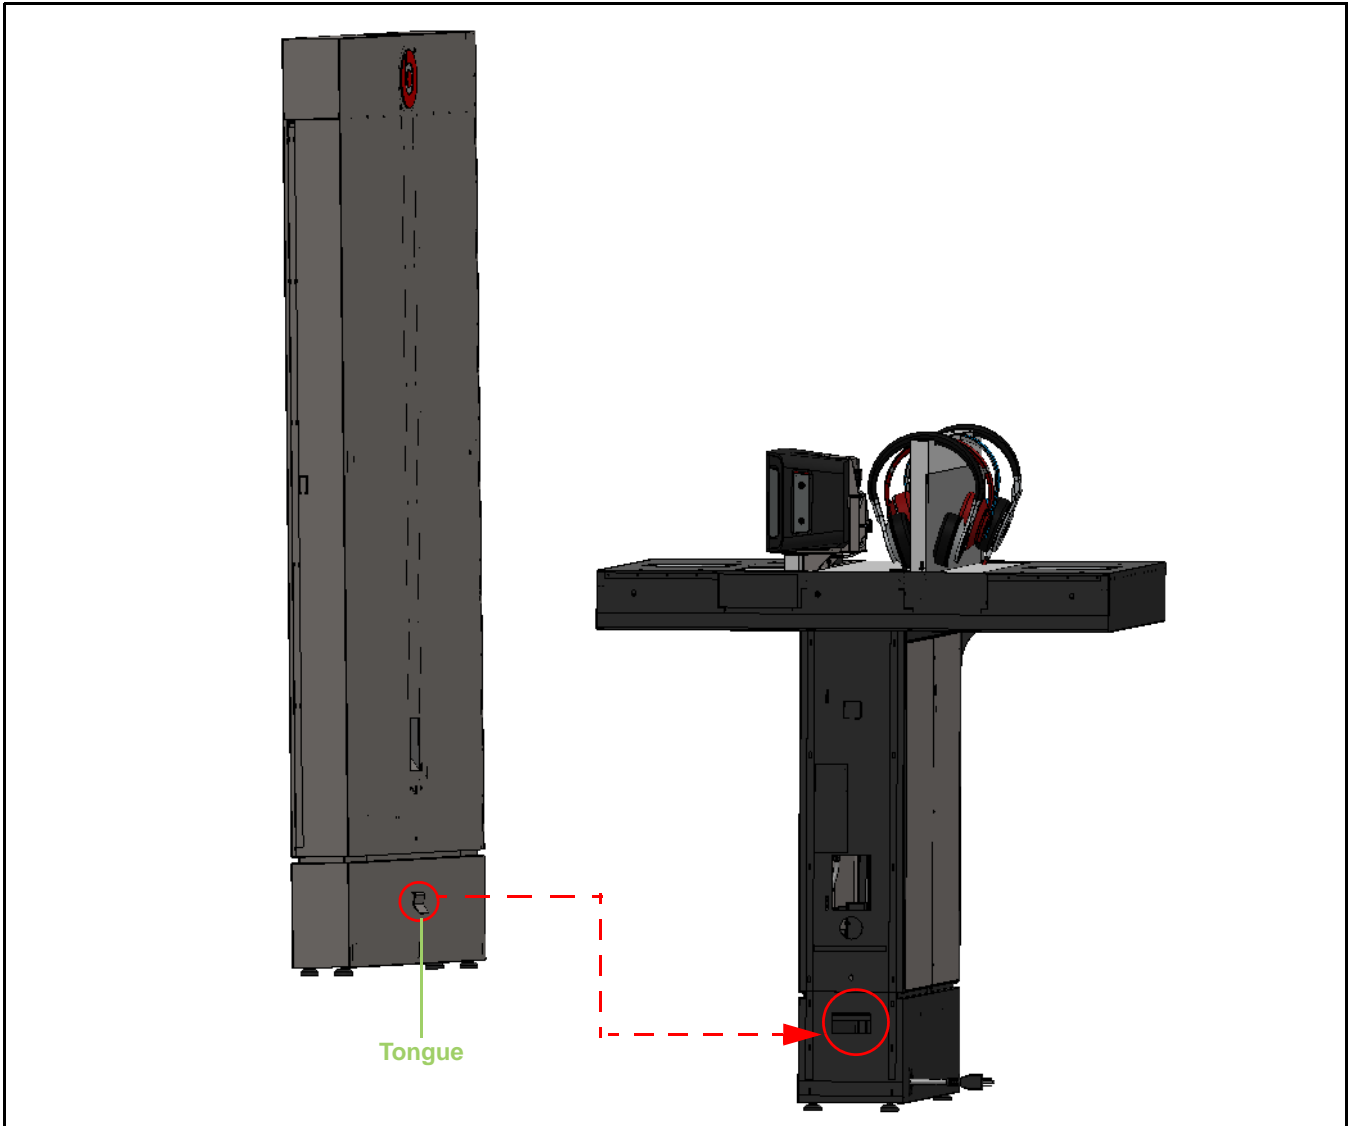


2. On the main base unit, locate the screw holes for the thumb screws underneath the right and left side of the display shelf. Insert the thumb screws through the screw holes in the main base unit and into the adjacent screw holes in the lightbox. Make sure the thumbscrews are tightened on the main base unit and the lightbox.

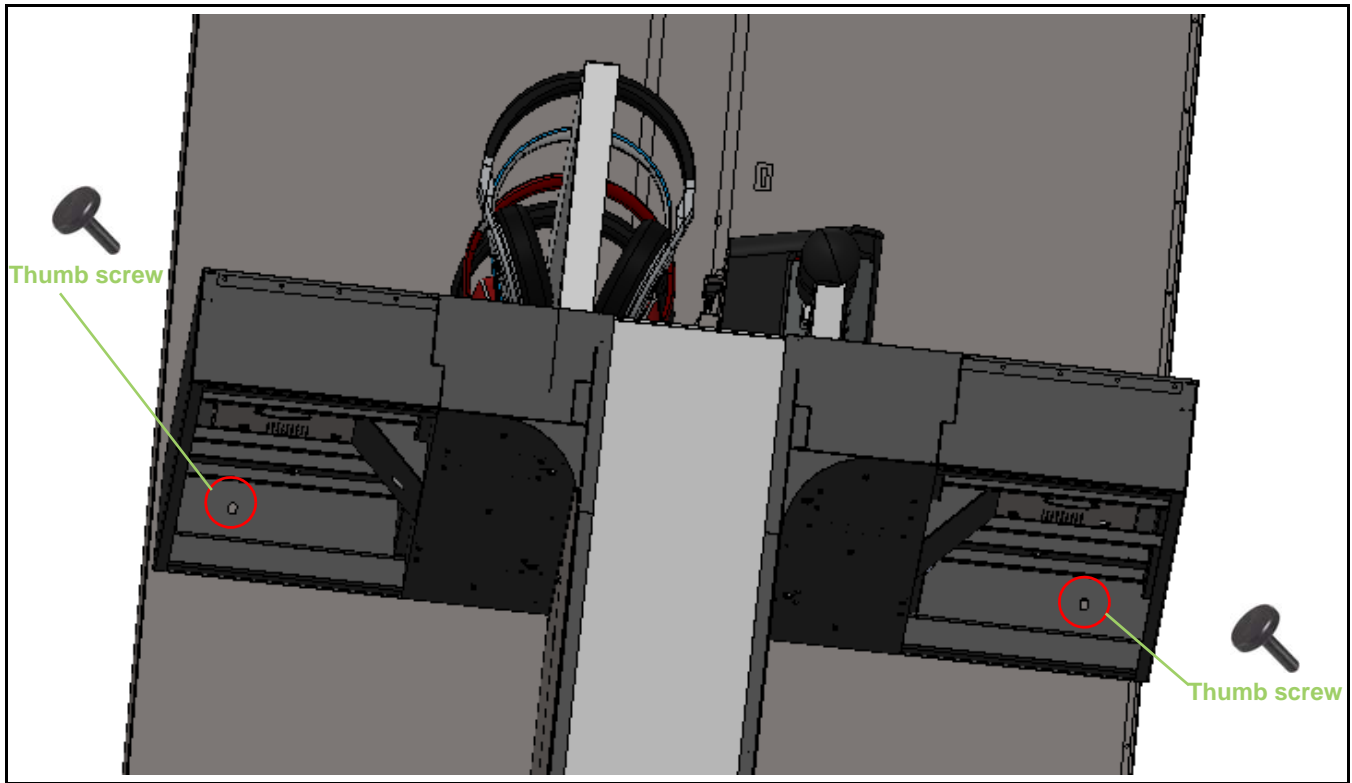


For the following steps, make sure the doors on both sides of the main base unit are unlocked, and you are facing the main base unit so the lightbox is on your right.

Social Table Installation Guide

3. Insert the four-pronged power cable from the main base unit into the corresponding power outlet in the lightbox.

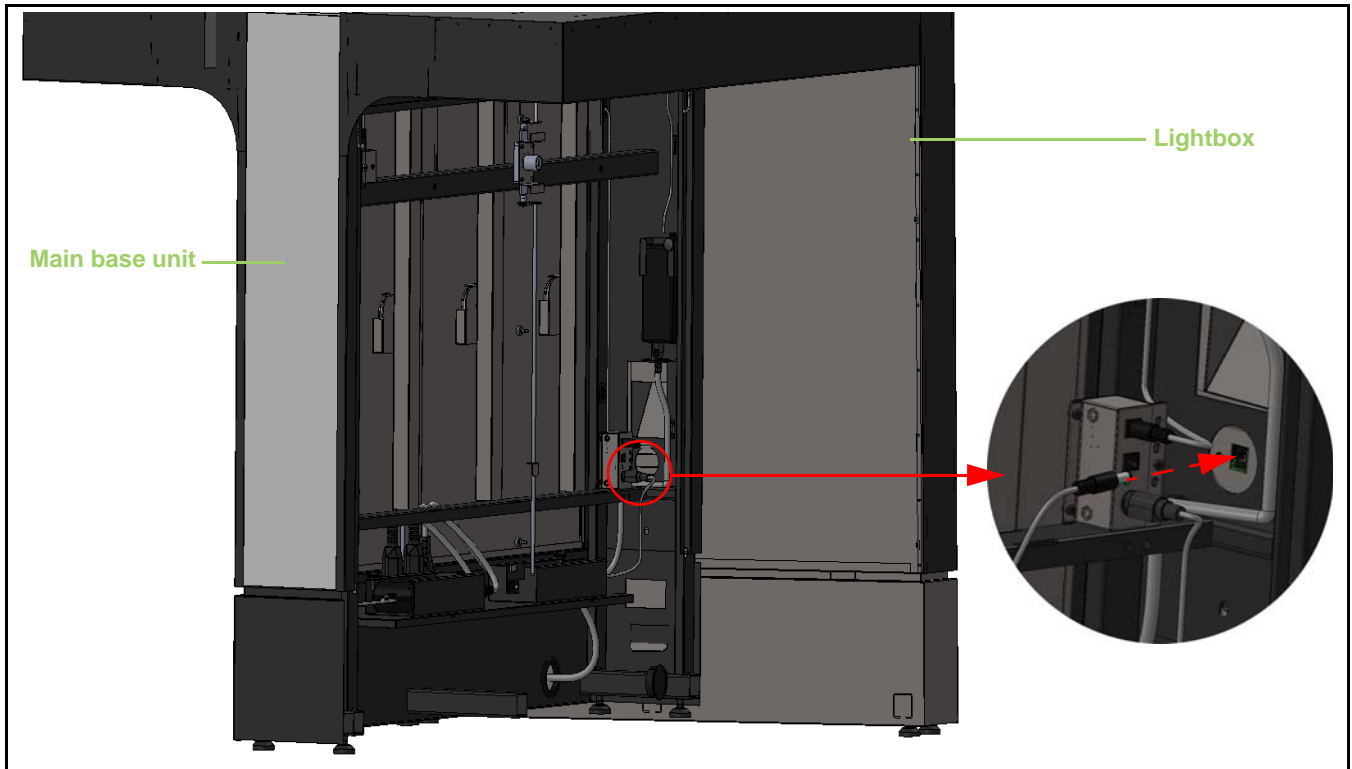


4. Insert the security screw through the main base unit and into the lightbox.

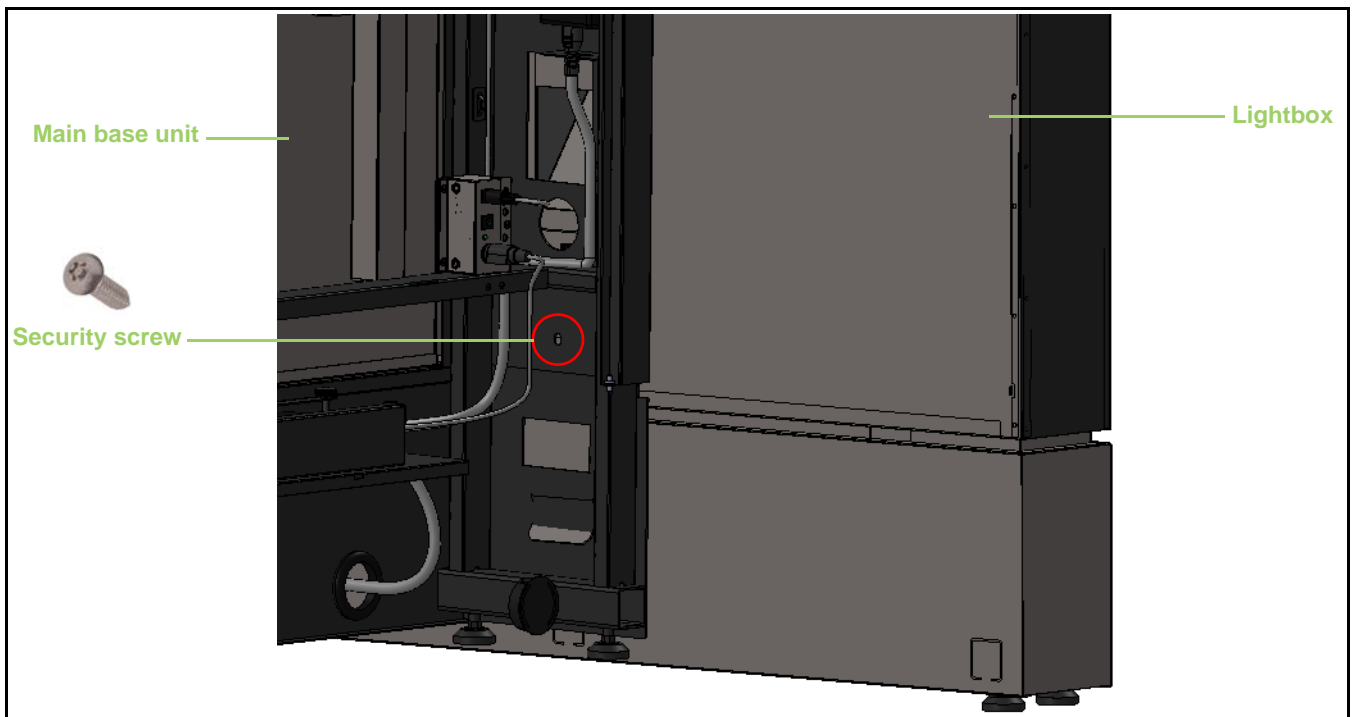

5. Close and lock the doors on both sides of the main base unit.
6. Face the main base unit so the lightbox is on your left.

7. Plug the main power supply from the main base unit into the power outlet in the wall.

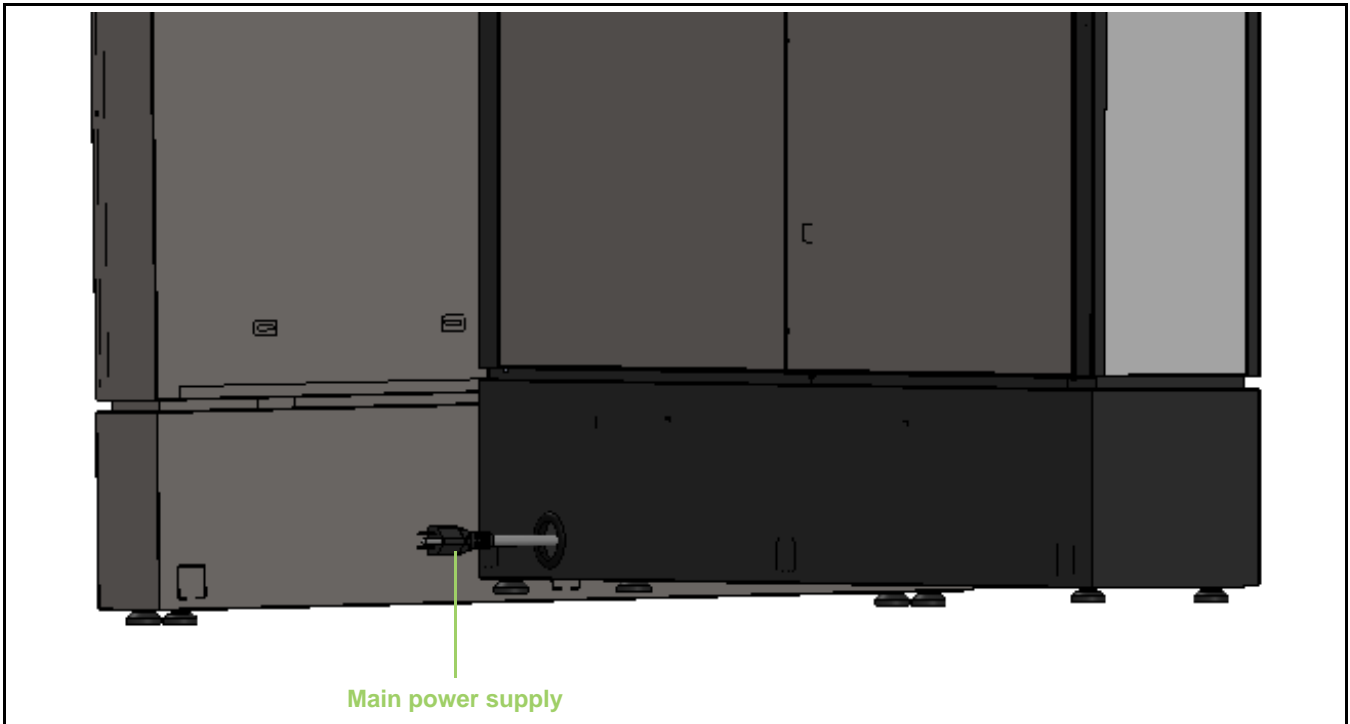





8. You are now ready to perform the functionality test.

Functionality Test







After installing the social table, a functionality test must be performed to ensure the social table and devices operating correctly.


1. Test the headphones by doing the following:

- a. Press the **Track Back**  button to restart the track that is currently playing. The headphones return to the default volume level.
- b. Press the **Track Forward**  button to advance to the next track.
- c. Slide the **Volume Control**  to the left and right to test the volume.
- d. Press the **Pause**  button to pause the track that is currently playing.




2. Test the speakers by doing the following:

- a. Press the **Track Back**  button to restart the track that is currently playing. The **Pill**  button becomes illuminated and the display returns to the default volume level.
- b. Press the **Track Forward**  button to advance to the next track.
- c. Slide the **Volume Control**  to the left and right to test the volume.
- d. Press the **Beatbox**  button to activate the Beatbox. The Beatbox button is illuminated the button, and the Beatbox returns to the default volume.
- e. Press the **Pause**  button to pause the audio.

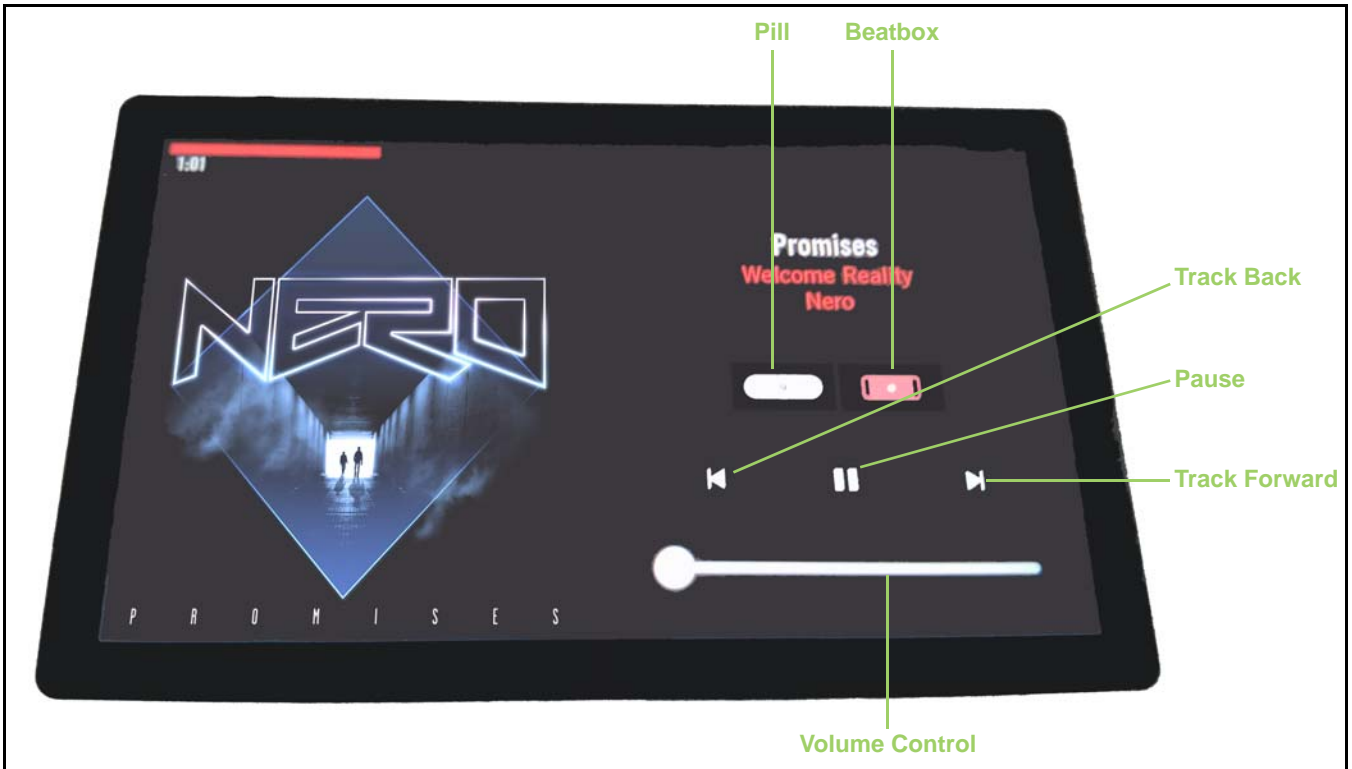

All devices will return to an idle state after 45 seconds if they are not used.

3. Test the coil system for the headphones by lifting each headphone up and away from the display.

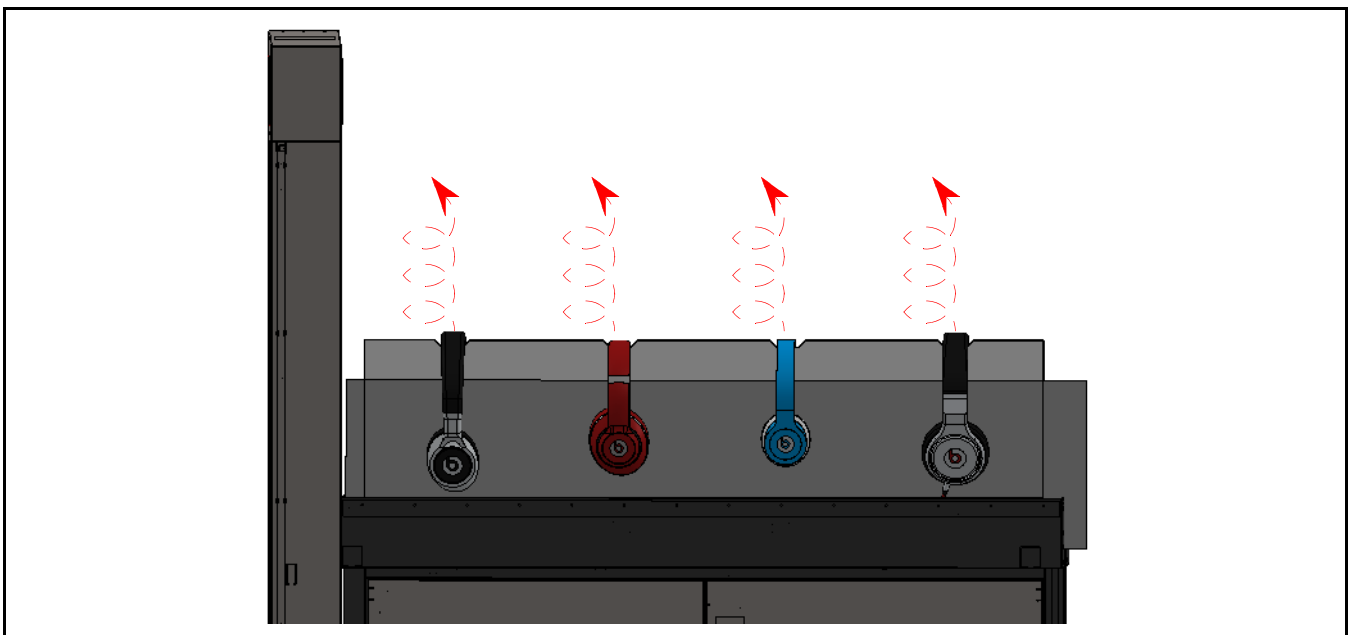

4. Make sure all of the LEDs on the main base unit and the lightbox are illuminated.

