

PowerXL Vortex Pro Air Fryer



User Manual and Startup Guide

Holland Venhuizen

Table of Contents

1: Your New Air Fryer

1.1: Introducing the PowerXL Air Fryer

1.2: Product Features

1.3: Visual Guide

2: Getting Started

2.1: Unboxing your Air Fryer

2.2: Before First Use

3: Using the PowerXL Air Fryer

3.1: Cooking Food

3.2: Troubleshooting

4: Safety Information

4.1: General Safety

4.2: Operation Warnings

5: Maintenance and Care

5.1: After Each Use

5.2: Deep Cleaning

5.3: Storage

5.4: Troubleshooting

6: Technical Specifications

Your New Air Fryer

1.1 Introducing the PowerXL Air Fryer

Fueled by Vortex Rapid Air Tech, the PowerXL Air Fryer is your solution to crispy, crunchy, delicious food without the wait time of traditional ovens or the hassle of oily deep fryers. This guide will help beginners, pro chefs, and anyone in between in using our cutting-edge equipment from the comfort of their own kitchen.

1.2 Product Features

- 8-quart capacity basket suitable for all meals, big and small.
- Touch LED panel with 10 preset cooking programs: fries, fish, eggs, chicken, bake, broil, dehydrate, defrost, vegetable and reheat.
- Timer and temperature settings built in.
- Removeable, non-stick basket and broiler tray.

1.3 Visual Guide



Getting Started

2.1 Unboxing Your Air Fryer

When unboxing your new air fryer, please ensure all materials are removed from the appliance before use, including cardboard, Styrofoam, films, and plastic. Also, ensure that you have all components before use, including the main body of the appliance, the fryer compartment, and the food basket.

2.2 Before First Use

Before first using your air fryer, complete all the following steps to verify that it is ready for cooking.

- Wipe the interior and exterior of the body with a damp cloth.

- Allow to dry thoroughly.
- Plug into a grounded, 120V outlet. **WARNING:** Failure to use proper outlets with this air fryer could cause bodily harm, including electrocution or fire. See safety information for more details.

Using the PowerXL Air Fryer

3.1 Cooking Food

1. Begin by placing food in the food basket. Do not overfill, as this may cause uneven cooking or burning.
2. Insert the fryer compartment fully.
3. Select preset using the LED Touch Control Screen or set the time and temperature for cooking manually.
4. Press start.
5. Shake the fryer compartment halfway through cooking for even distribution of air and heat (recommended).
6. Once finished, allow contents of the basket to cool before eating.
7. Remove from the basket and enjoy.

3.2 Troubleshooting

Please consult the diagram below if you are having any of the following problems with your air fryer:

Problem	Solution
Unit won't turn on	Check power cord and outlet.
Food not cooking evenly	Do not overfill; shake basket midway.

White smoke	Usually from excess fat/drippings; unplug unit immediately and allow to cool. Clean thoroughly.
Plastic smell on first use	Common and normal. Will dissipate and lessen with more uses.

Safety Information

4.1 General Safety

WARNING: Misuse of this appliance could lead to injury or harm to you or your belongings. **Read ALL instructions before use.** -**DO NOT** allow children to use unsupervised and keep out of reach when out of use.

-**DO NOT** submerge the appliance in water.

-**DO NOT** place this appliance on a cooktop, even if it is cool. -**DO NOT** operate the appliance on an unstable surface. -**DO NOT** place anything on top of the appliance while cooking is underway.

4.2 Operation Warnings

CAUTION: This appliance uses electricity, and misuse could lead to bodily harm, fire, or DEATH. Please read carefully.

-**NEVER** operate the appliance while the basket is open. -**NEVER** use this appliance for anything other than its intended use.

-**NEVER** plug the appliance into any electrical outlet besides a 120V, grounded outlet.

Maintenance and Care

5.1 After Each Use

After using the PowerXL Air Fryer, unplug and allow the appliance to cool completely. This may take up to 30 minutes. Once cooled, remove the food basket and broiler tray from the appliance and clean with dish soap and water. Do not use abrasive scrubbing devices as this may damage the interior. The tray is also dishwasher safe.

Wipe the interior and exterior of the appliance with a damp cloth after use. **WARNING:** DO NOT submerge appliance in water.

5.2 Deep Cleaning

If necessary, you can also clean the interior heating element with a non-abrasive sponge. Please ensure that the device has fully cooled and is unplugged before you do so.

5.3 Storage

To protect the lifespan and integrity of the PowerXL Air Fryer, ensure that it is stored in a dry place away from any major source of heat.

Technical Specifications

Capacity	8 Quarts
Wattage	1700 Watts
Voltage	120 Volts
Max Temp	430° Fahrenheit