## HOW TO

Safely anchoring, nailing or otherwise securing dressers, mirrors and other large pieces of furniture is easy when you have a plan.



finder. Make sure you mark two stud points within the length of the dresser and within a foot below the top of the dresser.


Facing the wall, line up a strap to the left stud marking. Line the stud mark halfway through the strap to leave room to attach to the dresser. Press a washer against the strap and the stud mark, and hold it steady.

3.

4.

Place a screw in the center of the washer. Create a hole in the strap by hand turning the screw. Once the screw touches the wall, tighten it with a power drill. Repeat this process on the right side as well.

- the wall. Place each strap with a fastener attached across the top of the dresser. Then, mark the locations.
- 7. Attach double-sided mounting tape to the top of the dresser to align with marked locations. Apply pieces of fastener to the top of your dresser.
- 8. Line up fastener pieces from straps on the wall to the prices attached to the top of your dresser.

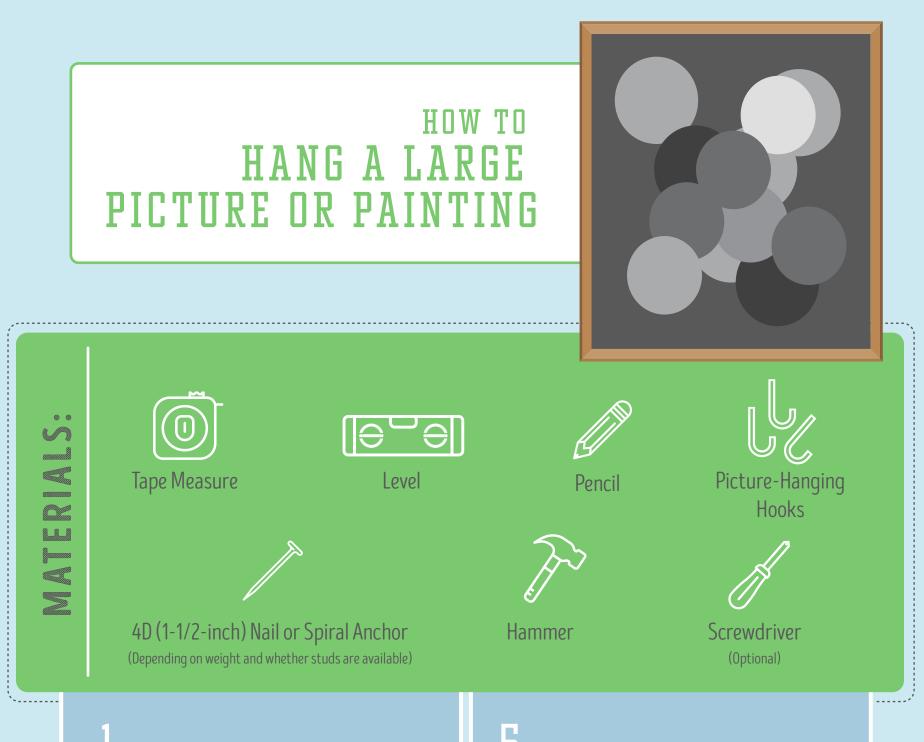

- At a desired height, hold your picture against the wall.
- 2. Mark the top center of the picture with a short pencil line.
- 3 Remove the picture from the wall.
- 4 Hook measuring tape onto the hanging wire attached to back of frame. Then, pull the wire tight and measure the distance to the top of the frame.
- J. Using the mark on the wall, measure down the same distance. Mark with a pencil. Next, drive a 4D nail into the stud.
- 6. If you're using a picture-hanging hook, mark the level spot on the wall with a hook rather than a nail. Remember to use your hook rated for the weight of your picture.
- 7. If there is no stud, use a spiral anchor instead. First, drive it into the wall with a screwdriver and then drive a screw into the anchor.

## HOW TO **MOUNT A HEAVY MIRROR**

0 0 **]**...... 

Tano

Carpenter's

Square

**Stud Finder** 



Screwdriver

18-Gauge,

Single-Strand Wire



Two D-Rings

and Screw Eyes

7

Hammer Awl




Wire Cutters



Screws

Painter's Tape



- 2. Using a stud finder, locate as many studs as possible within the length of your mirror. Mark the edges of each stud with a piece of tape. Then, mark the center of each stud with a pencil.
- 6. Attach screw eyes near the bottom and in the center of the mirror.

3 To locate its center, measure the mirror.

> Mark where D-rings should go on both sided of the mirror, which approximately should be 6 inches from the top.

5.

4

Use a carpenter's square to locate and mark mounting points in the center of the mirror frame.

- Grab a generous amount of wire, double it and insert it through the left bottom screw eye, up through the D-rings and weave it down to the screw eye on the right. Leave some slack and tie it off.
- 8. With help, hold the mirror to the wall again and mark the top of the mirror. Draw a level line across the wall.
- **9**. Choose two adjacent studs and draw level lines from the center of the studs to the top line. Measure down 5 inches from the top line of each stud center and mark with a pencil.
- 10. Nail in picture-hanging hooks rated for the weight of your mirror. Finally, hang the mirror up!

Sources: HowToSimplified.com • PopularMechanics.com • HGTV.com

**BROUGHT TO YOU BY** 

