



Meaco DD8L Desiccant Dehumidifier

QUICK START GUIDE



June 2024 Edition

Use this Quick Start Guide to get familiar with your new device's features.
Refer to the enclosed User's Manual for detailed instructions on using your unit.

WARNING:

- Never use the device without the air filter installed.
- For optimal use, operate the appliance in enclosed spaces only.

SETUP AND USE

1. Unboxing the Dehumidifier

Take out the device from its packaging, and remove accessories found in the bucket. Remove all tapes or styrofoam.


2. Positioning the Dehumidifier

Ensure that the appliance is kept in an upright position on a flat, stable surface.

WARNING: Avoid placing the dehumidifier directly against the wall or close to furniture. Instead, leave **6 inches of space** (or more) around all sides of the unit to allow free air circulation.

Keep wet clothes at a safe distance of a 30cm minimum away from the air inlet or outlet. This prevents water from dripping into the unit.


Always ensure the water container is correctly fitted. Otherwise, the 'Empty Tank' light will come on, followed by an alarm. As a result, the dehumidifier will shut off.

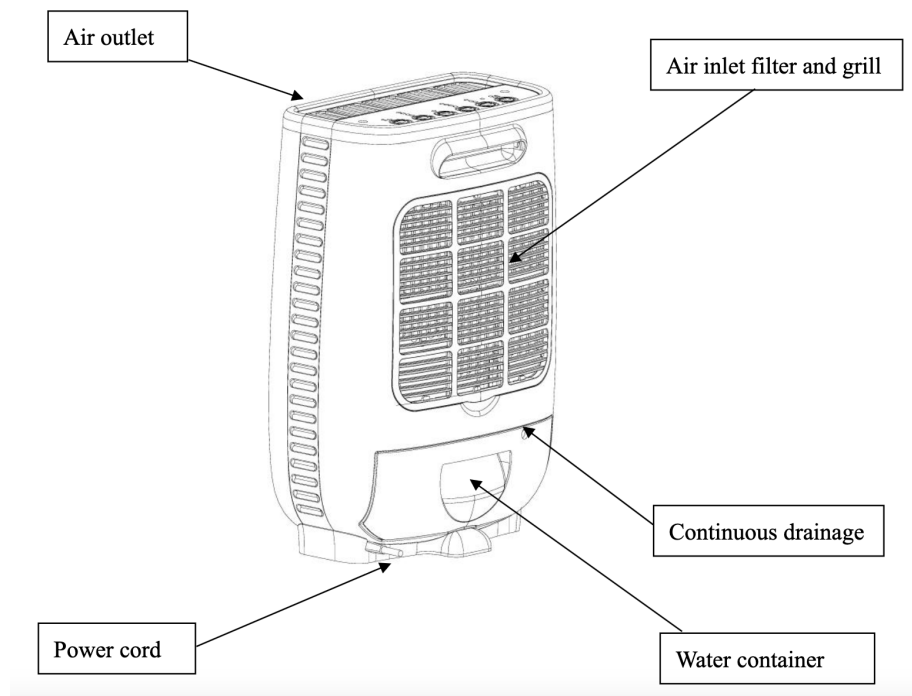

3. Operating the Appliance


Press the Power button; it will blink when it is on. Select your desired Mode. For most applications, this will be the 'Normal' mode.

To turn off, press the Power button again.

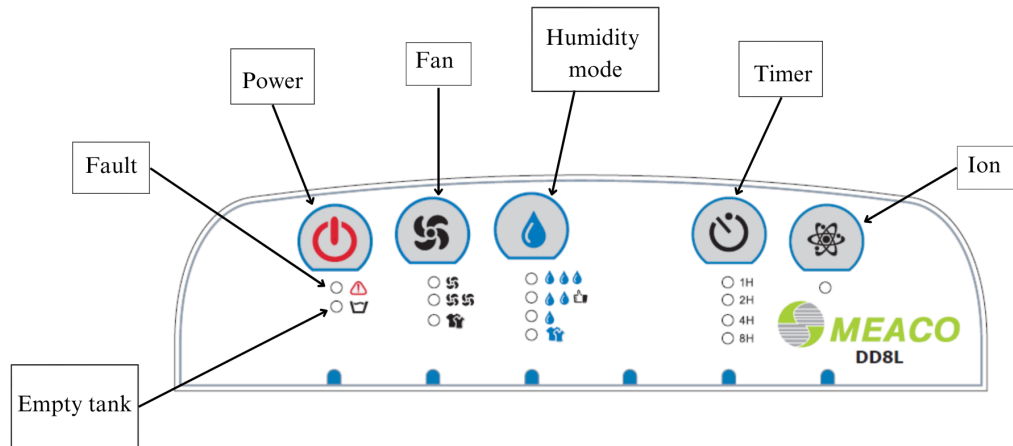

4. Emptying the Water

When the water container is full, the appliance will stop dehumidifying and the fan will halt after a cool-down period. Then the appliance will beep and the Empty Tank LED will flash. Empty the water container and return it to its original position. The dehumidifier will start working again.

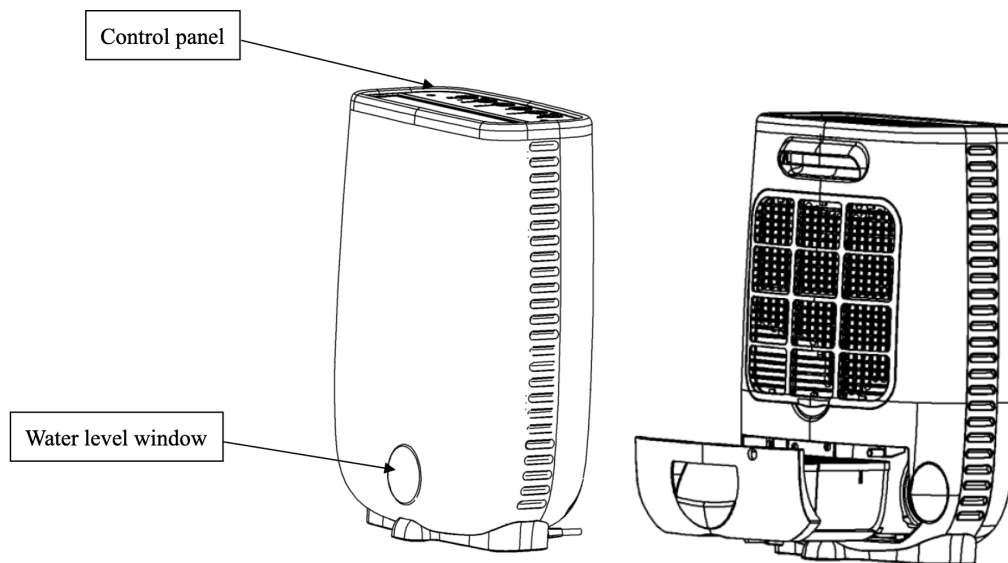

STORAGE

Remove the plug from the socket and empty the container. Allow the container and the dehumidifier to dry completely. Clean the air filter. The device is ready to be stored in a dust-free location away from direct sunlight, preferably covered with a plastic sheet.



For questions and product registration, contact us on 01483 234900 or visit online at meaco.com

Created by Chichi Daramola (just_chioma@hotmail.com)